AUTOMATIC DRUM WASHING MACHINE

USER MANUAL

HW–F1481	HW–F1481 ME
HW–F1281	HW–F1281 ME
HW–F1081	HW–F1081 ME
HW–F881	HW–F881 ME

Haier

TABLE OF CONTENTS

BEFORE USE

>COMPONENTS 03
>PREPARATION 04
>SAFETY INSTRUCTIONS 05
>INSTALLATION 06
>CONTROL PANEL 08

USING THE APPLIANCE

>PROGRAM SELECTION 10
>CONSUMPTION AND TECHNICAL DATA 11
>WASHING METHODS 12

MAINTENANCE

>CLEANING & CARE 16
>DISPLAY CODES 18
>TROUBLESHOOTING 19

LEGEND

☑ Yes

☒ No

☐ Optional

For your safety, any instructions in this manual with this "Warning" sign must be followed strictly.

DISPOSAL

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

COMPONENTS

THANKS FOR PURCHASING A HAIER PRODUCT

Please read these instructions carefully before using this appliance. The instructions contain important information which will help you get the best out of the appliance and ensure safe and proper installation, use and maintenance.

Keep this manual in a convenient place so you can always refer to it for the safe and proper use of the appliance.

If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and safety warnings.

ACCESSORIES

Check the accessories and literature

1x Inlet hose assembly

1x Bottom cover

1x User manual

1x Drain hose bracket



1x Warranty card (optional)

3x Blanking plugs

PREPARATION

PREPARING THE MACHINE

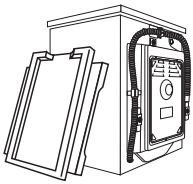

Remove all the packing materials to prevent unsteadiness, including the polystyrene base.
Upon opening the package, water drops may be seen on the plastic bag and the porthole. This is normal phenomenon resulting from water tests in the factory.

DESCRIPTION

This diagram may be slightly different from the layout of the washing machine you have just purchased due to technical improvements.

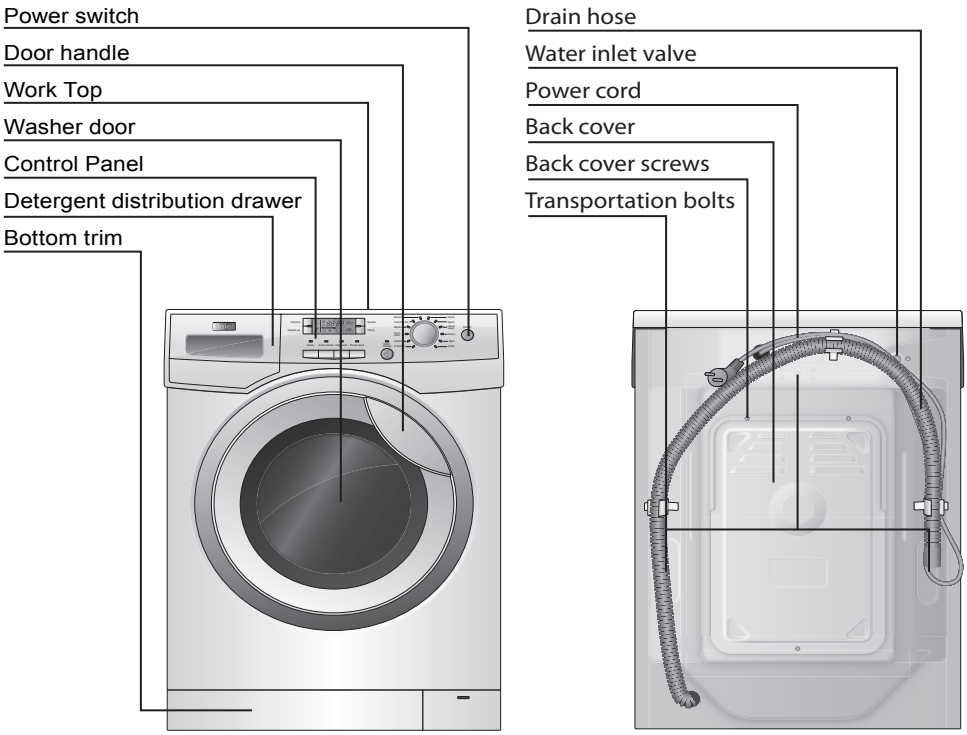

SAFETY INSTRUCTIONS

BEFORE SWITCHING THE APPLIANCE ON FOR THE FIRST TIME

DO ...

- ☑ ... Use a separate earthed socket for the power supply.
- ☑ ... Make sure that the plug is accessible.
- ☑ ... Hold the plug and not the electric cable when unplugging the power supply.
- ☑ ... Make sure that the fuses in the power circuit are rated for 15A.
- ☑ ... Keep away from heat sources and direct sun light to prevent plastic and rubber components from aging.
- ☑ ... Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- ☑ ... Check that hose joints and connections are firm and no water can leak. If joints are loose or there is leakage, turn off the water supply and repair. Do not use the washing machine until the hoses are properly fixed.

DO NOT ...

- ☒ ... Touch or use the appliance when barefoot or with wet or damp hands or feet.
- ☒ ... Use flammable detergent or dry cleaning agent.
- ☒ ... Use any flammable sprays in close vicinity to the appliance.
- ☒ ... Remove or insert the plug in the presence of flammable gas.
- ☒ ... Allow children or infirm persons to play with the appliance or packing materials.
- ☒ ... Install the appliance outdoors in a damp place, or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ☒ ... Place the washing machine directly on a carpet, or close to a wall or furniture.

DURING DAILY USE OF THE APPLIANCE

DO ...

- ☑ ... Pull up zips and fix loose threads to prevent the items from being entangled. If necessary, put small items into a net bag or pillow.
- ☑ ... Turn off the machine after each wash program and switch it off at the mains to save electricity and for safety. Wipe clean the lower part of the porthole.
- ☑ ... Keep the door slightly open when the washing machine is not in use to prevent formation of odours.
- ☑ ... Let the power cord be replaced by the manufacturer, his service agent or other accordingly qualified persons, in case it is damaged.
- ☑ ... Ensure that the appliance is not used by persons with reduced physical, sensory or mental capabilities, lack of experience and knowledge without supervision or instruction by a person responsible for their safety.
- ☑ ... Supervise children to ensure that they do not play with the appliance.

DO NOT ...

- ☒ ... Touch the washer door during the washing process - it gets hot!
- ☒ ...Place heavy objects or sources of heat or damp on top of the appliance.
- ☒ ... Hot wash foam rubber or sponge-like materials.
- ☒ ... Open the detergent distribution drawer during the wash cycle.
- ☒ ... Force the washer door open. The door is fitted with a self-lock device and will open shortly after the washing procedure is ended.
- ☒ ... Open the washer door if the water level is visibly over the porthole.
- ☒ ... Cover the washing machine with plastic cover so that inside dampness cannot be kept in.

INSTALLATION

ADJUSTING THE BOTTOM COVER

Before removing the transportation bolts, please fix the bottom cover to the bottom of the washing machine. Lay down the machine (fig. 1.), screw off the feet and adjust the bottom cover with the four holes corresponding the screw holes of the feet. Then screw the feet back on through the cover and fix it thus securely to the bottom of the machine (fig. 2.).

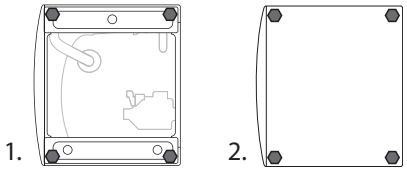

It keeps out the dampness and reduces the noise.

DISMANTLE THE TRANSPORTATION BOLTS

The transportation bolts are designed for clamping anti-vibration components inside of the washing machine during the transportation process.

1. Remove the back cover.
2. Remove the three bolts on the rear side and take out the synthetic stabilisers from within the machine.
3. Replace the back cover.
4. Fill the holes left by the bolts with blanking plugs.

Note: Keep the transportation bolts and synthetic stabilisers in a safe place for later use.

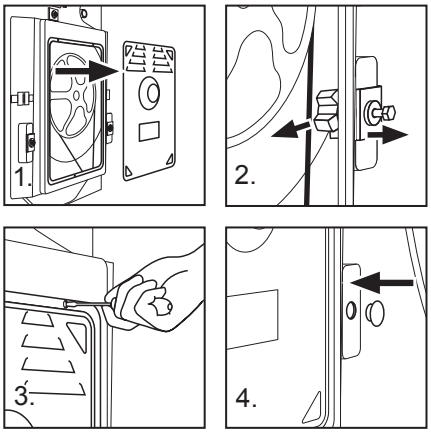

ADJUSTING THE WASHING MACHINE

There are adjustable feet under the bottom of the washing machine. Before use, they should be adjusted so that the machine is level. This will minimise vibrations and thus noise during use. It will also reduce wear and tear. We recommend using a spirit level to level the appliance.

INLET HOSE

1. Connect the nut on the inlet hose to the connector on the water valve.
2. Apply inlet hose to a water tab with cold, fresh water.

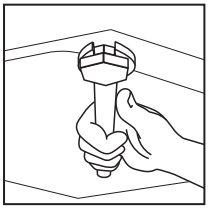

Note: Use the hose-set supplied with the appliance. Old hose-sets should not be reused.

DRAIN HOSE

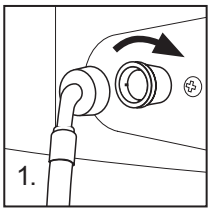

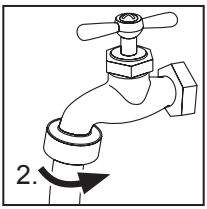

1. Use the drain hose bracket to keep the end of the drain hose retained and prevent the outflow of water. Don't extend the length of the drain hose; if an extended hose is required, please consult a serviceman.

2. The height of the drainage outlet must be 80-100 cm. Fix the drain hose to the clip at the back of the washing machine to prevent it from dropping off.

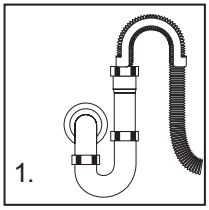

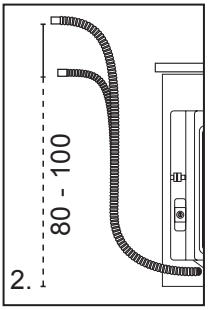

Note: The drain hose should not be submerged in water and should be securely fixed and leak-free. If the drain hose is placed on the ground or if the pipe is at a height of less than 80cm, the washing machine will continuously drain while being filled (self-siphoning).

CONNECTING TO THE POWER SUPPLY

Before connecting to the power supply, check:

¬ The socket is adequate for the maximum power of the washing machine

(For safety, fuses in the power circuit should be rated for no less than 15A).

¬ The voltage should meet the requirement.

¬ The power outlet should be capable of accepting the washing machine plug.

¬ Connect the machine to an earthed socket outlet.

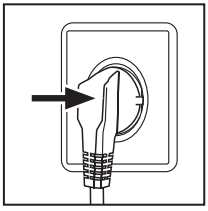

CONTROL PANEL

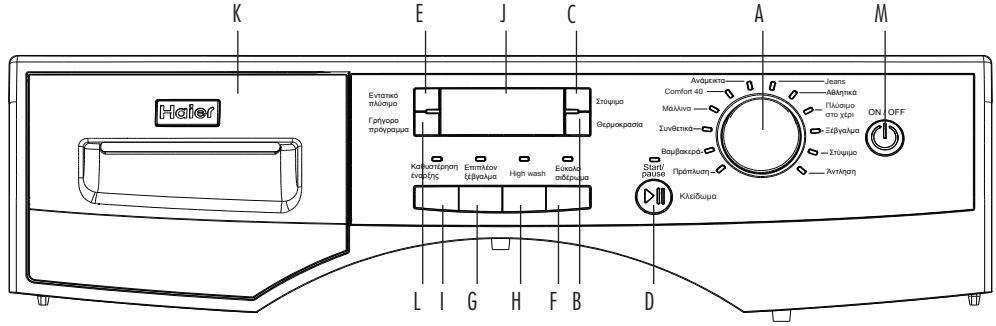

A	Program knob	F	Rinse hold button	K	Detergent distribution drawer
B	Temperature button	G	Extra rinse button	L	Speed-up button
C	Speed button	H	High wash	M	Power button
D	Start/pause button	I	Delay button		
E	Intense button	J	Display		

OPERATIONAL FUNCTIONS

A	¬ Program knob	_Select program by turning the knob (See "program modes" on page 8).
B	¬ Temperature button	_ Select the desired washing temperature (–,30,40,50, 60,90°C) by pressing and holding down this button. When selected, the temperature is shown on the display. Cold wash is selected when the symbol "–" is displayed.
C	¬ Speed button	_ Select the desired spin speed (0, 400, 600, 800, 1000, 1200, 1400 rpm) by pressing and holding down this button. When selected, the speed value is shown on the display. The washing machine does not spin when "0" is displayed. The washing machine spins at 1200 rpm when "1200" is displayed.
D	¬ Start/pause button	_ If you press this button, ":" will be displayed and operation will start. If you press this button during a wash cycle, the ":" sign will start blinking and operation will pause. Press it again to resume operation. Note: After operation is suspended, the washing temperature, spinning speed and other functions can not be reset. _ Press this button for 2 seconds to unlock the door if the status allows the door to open (water level lower than porthole, water temperature lower than 50°C, stopped motor).
E	¬ Intense button	_ If the laundry is heavily soiled, press this button before starting the program. When the button is pressed, the washing time increases.
F	¬ Rinse hold button	_ If you press this button, the washing machine will not drain the water after the last rinsing operation, but start a soaking cycle. The indicator light goes on. To spin the laundry, press this button again. The indicator light turns off and the program continues to the end. Note: Press only when "Prewash", "Cotton", "Synthetics" or "Rinse" is selected.

G	¬ Extra rinse button	_ Press this button, the washing machine will perform additional rinses. Press the button once to select one additional rinse. The display will show"P-1". Press the button repeatedly and the screen will display "P-2''or "P-3'', indicating two or three additional selected rinses. The "extra rinse light" is activated and flashes during the performance. "P-1/2/3" is displayed alternating with the remaining time. The light turns off and the display disappears when the extra rinse ends.
H	¬ High wash	_ For heavily soiled laundry. Press the button before starting the program to increase the amount of water used. The "high wash" light is on during the performance.
I	¬ Delay button	_ Press the button repeatedly before starting the program to enter the time you want the machine to be finished in, the start will delay from 0.5 to 24 hours in 30-minute intervals. This also includes the length of the program itself, so the delay time must be longer than the program length selected. This function can not be selected in the " Rinse", "Spin" and "Drain" program.
J	¬ Display	_ The display shows the washing time remaining, the selected temperature and speed, the options, the alarm warning, etc. (see "Display codes" on page 12).
K	¬ Detergent distribution drawer	_ Instructions are printed on the handle of the drawer. Open the drawer, three compartments can be seen: Compartment 1: Pre-wash detergent Compartment 2: Detergent for programs 1 to 9 Compartment 3: Softener, conditioning agent, perfume, and other additives. 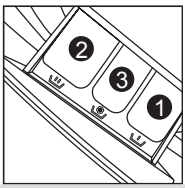
D+I	¬ Combined buttons for button lock	_ By pressing the "Delay" and "Start/Pause" buttons for 3 seconds after having started a program, the button lock is activated. The display shows . In order to cancel the button lock, press the two buttons again for 3 seconds, and the display will disappear. Caution: the button lock needs to be cancelled actively, it will not disappear automatically after the washing cycle.
L	¬ Speed-up button	_ Press this button before starting the program to reduce the washing time and temperature. The speed-up light will is on until the program ends.
M	¬ Power button	_ Press this button to turn the machine on and off. It will turn off automatically after five minutes without activity.

PROGRAM SELECTION

PROGRAM MODES

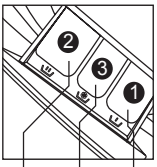

1 Detergent compartment for prewash mode
2 Detergent compartment
3 Compartment for softener and other additives

Program		Temperature Maximum	Preset	2	3	1	Recommended Laundry	MAX. LOAD	Preset spin speed
1	¬ Prewash	- to 90 °C	40 °C	☑	☐	☑	Cotton fabrics	8 kg	1000 rpm
2	¬ Cotton	- to 90 °C	40 °C	☑	☐	☒	Cotton fabrics	8 kg	1000 rpm
3	¬ Synthetics	0 ° to 60 °C	40 °C	☑	☐	☒	Fast colours / Medium soiled	4 kg	1000 rpm
4	¬ Wool	0 ° to 40 °C	30 °C	☑	☐	☒	Wool fabrics	3 kg	600 rpm
5	¬ Comfort 40	0 ° to 40 °C	40 °C	☑	☐	☒	Cotton or synthetic	4 kg	1000 rpm
6	¬ Mixed	0 ° to 40 °C	40 °C	☑	☐	☒	Different materials	4 kg	1000 rpm
7	¬ Jeans	0 ° to 90 °C	40 °C	☑	☐	☒	/	4 kg	1000 rpm
8	¬ Sport	0 ° to 40 °C	30 °C	☑	☐	☒	Sports wear	4 kg	800 rpm
9	¬ Hand wash	0 ° to 40 °C	30 °C	☑	☐	☒	/	4 kg	400 rpm
10	¬ Rinse	/	/	☒	☐	☒	/	8 kg	400 rpm
11	¬ Spin	/	/	☒	☒	☒	/	8 kg	1000 rpm
12	¬ Drain	/	/	☒	☒	☒	/	8 kg	/

☑ Yes ☒ No ☐ Optional

CONSUMPTION AND TECHNICAL DATA

CONSUMPTION TABLE

The wash cycle times are intended as a guide only. The actual time used may vary due to different water pressure, initial water temperature, etc.

PROGRAM	MAX. LOAD	ENERGY CONSUMPTION	WATER CONSUMPTION	WASHING TIME
¬ Prewash	8 kg	0.663 kWh	105L	2:15 h
¬ Cotton 60 °C *)	8 kg	1.326 kWh	62.8 L	2:55 h
¬ Synthetics	4 kg	0.481 kWh	43.6L	1:16 h
¬ Wool	3 kg	0.197 kWh	49.6 L	1:04 h
¬ Comfort 40	4 kg	0.466 kWh	43.6L	0:44 h
¬ Mixed	4 kg	0.527 kWh	52.3 L	1:24 h
¬ Jeans	4 kg	0.527 kWh	70.2 L	1:48 h
¬ Sport	4 kg	0.179 kWh	37.4L	0:28 h
¬ Hand wash	4 kg	0.147 kWh	41.8 L	0:57 h

*) EN 60456 test program / Energy label program with Intense and 1400 rpm spin speed.

TECHNICAL DATA

	HW-F 1481/ME	HW-F 1281/ME	HW-F 1081/ME	HW-F 881/ME
Power source	220 - 240 V / 50 Hz	220 - 240 V / 50 Hz	220 - 240 V / 50 Hz	220 - 240 V / 50 Hz
Max. working current (A)	10	10	10	10
Water pressure (MPa)	$0.03 \leq P \leq 1$	$0.03 \leq P \leq 1$	$0.03 \leq P \leq 1$	$0.03 \leq P \leq 1$
Nominal load (kg)	8	8	8	8
Spinning speed (r/min)	1400	1200	1000	800
Washing programs	12	12	12	12
Max. power (W)	2000	2000	2000	2000
Dimensions (HxDxW mm)	850 x 650 x 595	850 x 650 x 595	850 x 650 x 595	850 x 650 x 595
Net weight (kg)	86	86	86	86

WASHING METHODS

PLEASE NOTE

This washing machine is for domestic use only. Do not use it for purposes other than that for which it was designed. Follow the instructions given on the label of each garment and wash only machine-washable garments.

POWER SUPPLY

Connect the washing machine to the power supply (220V to 240V~/50Hz).

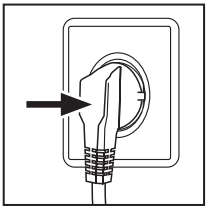

WATER CONNECTION

Turn on the tap. The water must be clean and clear.

Note: Before use, check for leakage in the joints between the tap and the inlet hose by turning on the tap.

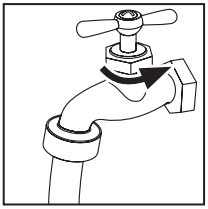

PREPARING THE LAUNDRY

¬ Sort out clothes according to fabric (cotton, synthetics, wool or silk) and to how dirty they are.

¬ Separate white clothes from coloured ones. Wash them first by hand to check if they fade or run.

¬ Empty pockets (keys, coins, etc.) and remove the harder decorative objects (e.g. brooches).

¬ Garments without hems, underwear, finely woven textile such as fine curtains are to be put into wash bag (it is better not to wash them in a washing machine).

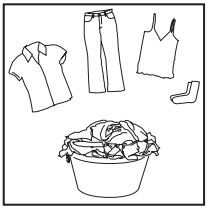

¬ Close zippers and hooks, make sure the buttons are sewn on tightly and place small items such as socks, belts, bras, etc. in the wash bag.

¬ Unfold large pieces of fabric such as bed sheets, bedspreads, etc.

¬ Turn shirts inside out.

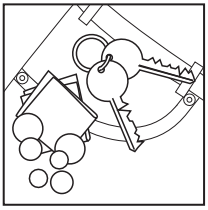

LOADING THE MACHINE

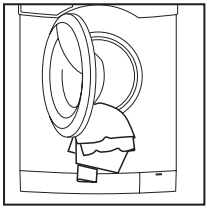

Open the washer door, put in the laundry piece by piece. Close the door tightly.

¬ When first using the washing machine, let it run unloaded for one program to prevent the laundry from being tainted by oil or dirty water from the washing machine.

¬ Do not overload the washing machine.

SELECTING DETERGENT

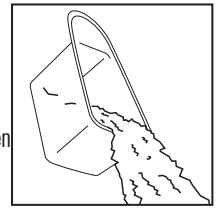

The washing efficiency and the performance is determined by the quality of detergent used. Special non-foaming detergent produces good washing results. Use specific detergents for synthetic and woollen goods. Do not use dry cleaning agents such as trichloroethylene and similar products.

Note: Do not add more detergent than needed. Please follow the dosage recommendation on the detergent package.

ADDING DETERGENT

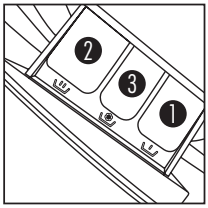

Slide out the detergent drawer and put the required detergent and softening agent into the corresponding compartments. Push back the drawer gently. (Refer to the instructions on the drawer)

Caution:

¬ For pre-washing program, detergent should be added to both compartments 1 and 2. For other programs, do not add detergent to compartment 1.
¬ Use liquid detergent according to the instructions on its package. Do not use liquid detergent if the pre-wash mode or "Start delay" is selected.
¬ Do not overuse softener; otherwise, it will damage the artificial fibers.

SELECTING PROGRAM

To get the best washing results, an appropriate washing program should be selected according to the laundry type. There are instructions on the handle of the detergent distribution drawer. Please turn the program knob clockwise to select the right program.

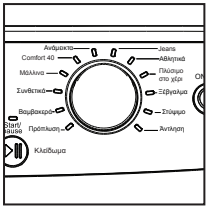

SELECTING FUNCTIONAL

Select the required options. (Refer to the "Control panel" pages 08 and 09)

SETTING WASHING TEMPERATURE

Press and hold down the temperature button until the desired temperature is selected or the symbol "–" for no water heating.

SETTING SPIN SPEED

Press and hold down the speed button until the desired speed is selected or the symbol "0" is selected for no spin. See "Operational functions" on the "Control panel" pages (08 and 09) for selecting temperature and spin speed. It is advisable to select the recommended value.

WASHING

Press the Start/Pause button. The washing machine will operate according to the pre-set programs. The washing machine will stop operation automatically when a washing cycle ends. The "End" sign will appear on the display. Open the washer door and take out the laundry.

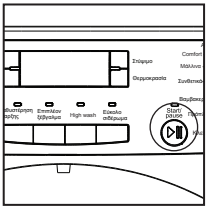

AFTER WASHING

Turn off the water supply and unplug the power cord. Open the washer door to prevent formation of moisture and odours. Let the door open while not used.

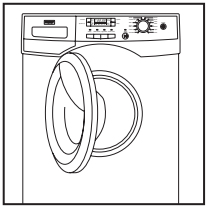

TIPS FOR SAVING ENERGY

1. Collect clothes for one full wash load.
2. Avoid overloading the washing machine.
3. Pre-wash only heavily soiled clothes.
4. Reduce the amount of detergent or choose the speed up wash programs for slightly soiled clothes.
5. Choose a proper washing temperature. Modern detergents can wash with very good result already in lower temperature than 60°C. Only user higher temperature than 60°C for heavily soiled laundry.
6. Follow the dosage recommendation on the detergent package to avoid using too much detergent.
7. Softening agent makes clothes feel softer and easier to iron.
8. Adding fabric conditioner will also get rid of static condensation to make ironing easier.

CARE CHART

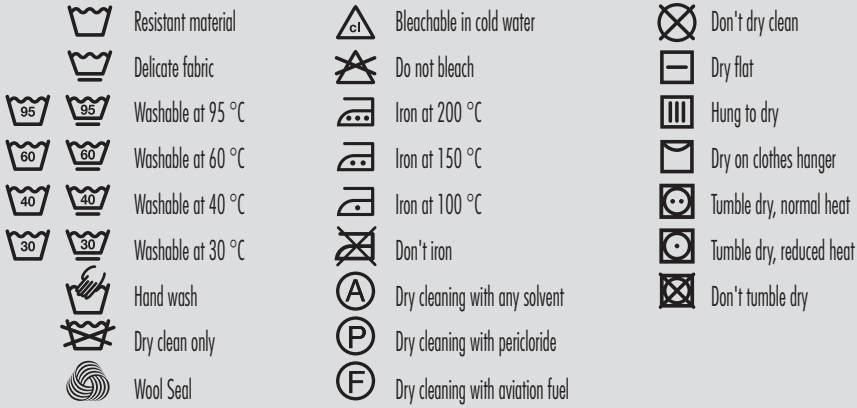

LOAD REFERENCE

Bed sheet (single)	Cotton	Approximately 800g
Blanket	Wool	Approximately 3000g
Blended fabric clothes	/	Approximately 800g
Jackets	Cotton	Approximately 800g
Jeans	/	Approximately 800g
Overalls	Cotton	Approximately 950g
Ladies Pyjamas	/	Approximately 200g
Shirts	/	Approximately 300g
Socks	Blended fabrics	Approximately 50g
T-Shirts	Cotton	Approximately 300g
Underwear	Blended fabrics	Approximately 70g

CLEANING & CARE

AFTER WASHING

Turn off the water supply and pull out electricity plug after each wash. Open the washer door to prevent formation of moisture and odours. If the washing machine is left idle for a long period, drain the water in the machine and replace the drain hose.

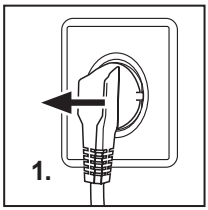

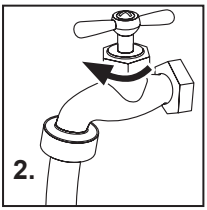

CLEANING THE DETERGENT DRAWER

Clean the detergent distribution drawer regularly.

Swing out the drawer, flush it clean with water and then replace it.

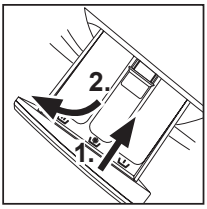

CLEANING THE MACHINE

Unplug the machine during cleaning and maintenance. Use a soft cloth dampened with soap liquid to clean the machine case and rubber components. Do not use organic chemicals or corrosive solvents.

CLEANING THE FILTER

Clean the filter once a month:

1. Pull out the bottom cover with thin objects or tools carefully.
2. Pull the drain hose out of the sewage set in the bottom panel.
3. Hold the drain hose into a water container, take out the plastic plug and let the excess water flow into the container. Reinstall the plug and push the hose back.
4. Remove the filter by turning counterclockwise.
5. Flush the filter clean with running water.
6. Replace the filter by turning clockwise and remount the cover.

Caution:

The filter must be in place, or it may lead to leakage.

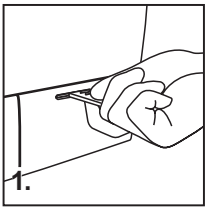

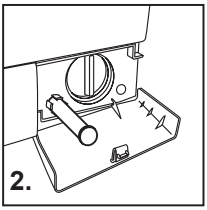

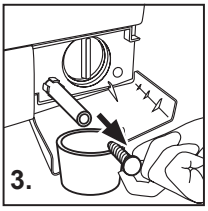

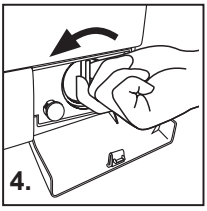

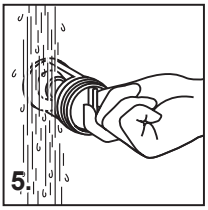

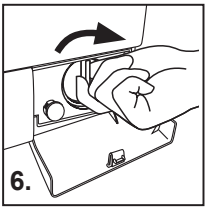

WATER INLET AND INLET FILTER

To prevent blockage to the water supply by ingress of foreign substances, clean the water inlet and inlet filter regularly.

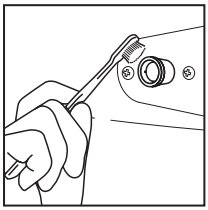

MOVING THE MACHINE

If the machine is to be moved to a distant location, replace the transportation locks removed before installation to prevent damage as shown below.

1. Remove the blanking plugs.
2. Remove the back cover
3. Insert the synthetic stabilisers and the transportation bolts.
4. Tighten the bolts with a spanner.
5. Replace the back cover.

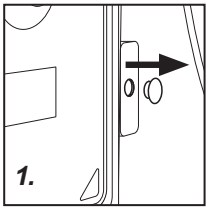

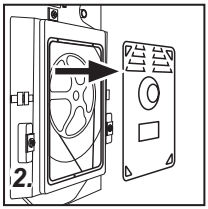

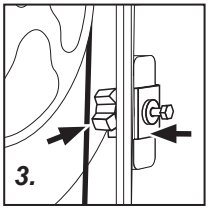

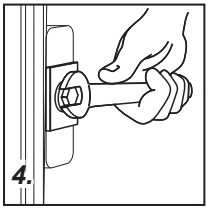

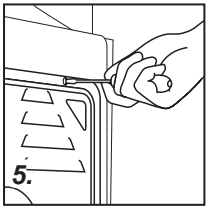

LONG PERIODS OF DISUSE

If the washing machine is left idle for a long period, pull out the electrical plug and turn off the water supply. Open the washer door to prevent formation of moisture and odours. Let the door open while not used.

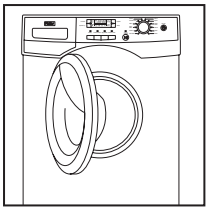

DISPLAY CODES

DISPLAY CODES AND SPECIAL FUNCTIONS

CODES	CAUSES	SOLUTIONS
Err1	¬ Washer door is not properly shut.	_ Close the washer door properly
Err2	¬ Drainage error.	_ Clean the filter and check the drain hose for blockage.
Err3	¬ Temperature sensor error (Appears at the end of a cycle).	_ Please contact the Service Center.
Err4	¬ Heater error (Appears at the end of a cycle).	_ Please contact the Service Center
Err5	¬ Water inlet error.	_ Check the tap and the water pressure.
Err6	¬ Motor error.	_ Please contact the Service Center.
Err7	¬ Motor error.	_ Please contact the Service Center.
Err8	¬ Water exceeds protective level.	_ Please contact the Service Center.
Er10	¬ Water sensor error.	_ Please contact the Service Center.
unb	¬ Laundry is unevenly distributed.	_ Redistribute laundry to balance the drum.
End	¬ End of wash cycle.	
1:16	¬ Status information: remaining program time is 1 hour and 16 minutes.	
0:01	¬ Status information: remaining program time is 1 minute.	
60	¬ Status information: Preset washing temperature is 60° C.	
-	¬ Cold wash.	
800	¬ Status information: Preset spinning speed is 800rpm.	
	¬ Keyboard is locked.	

¬ Control panel lock function: Press the "Delay" and the "Start/Pause" buttons simultaneously for 3 seconds after starting a program. It can no longer be changed by operating buttons or knobs. The washing machine emits an audible signal while the control panel is locked. To unlock press the "Delay" and "Start/Pause" buttons again for 3 seconds.

¬ Power-off memory function: In case of abrupt power failure or the need to cut off the power during a program cycle, the present settings will be saved and the preset operation will resume when the power is on again.

¬ This washing machine memorises the previous wash settings for each program. If you press the "Start/Pause" button, the previous settings are automatically selected.

¬ To cancel a program or select a new program and options during the wash cycles.

a) Press the "Start/Pause" button, then switch off the power and the program is automatically cancelled. Turn the program selector again to choose another program.

b) If you wish to select an option during the wash cycle, press the "Start/Pause" button, then select the desired option and press the "Start/Pause" button again.

Note: The Rinse hold function can be selected directly without pressing first the "Start/Pause" button, but before the machine starts the spin program.

TROUBLESHOOTING

TROUBLESHOOTING

The following circumstances do not constitute problems. Do not contact the Service Center until the problem has been confirmed.

PROBLEM	CAUSES	SOLUTIONS
Washing machine fails to operate.	¬ Poor connection to the power supply. ¬ Power failure. ¬ The washer door is not properly closed. ¬ Machine has not been switched on.	_ Check connection to the power supply. _ Check the power supply. _ Close the washer door properly. _ Make sure the machine is switched on.
Washing machine cannot be filled with water.	¬ There's no program selected. ¬ Water tap is not turned on. ¬ Water pressure is less than 0,03 Mpa. ¬ The inlet hose is kinked. ¬ Water supply failure. ¬ The program knob is not properly set. ¬ The washer door is not properly closed. ¬ The inlet hose filter is blocked.	_ Make sure to select a program. _ Turn on the water tap. _ Check water pressure. _ Check the inlet hose. _ Ensure the water supply. _ Set the program knob properly. _ Close the washer door properly. _ Unblock the inlet hose filter.
Machine is draining while being filled.	¬ The height of the drain hose is below 80 cm. ¬ The drain hose is in water.	_ Install drain hose within 80-100 cm of height. _ Make sure the drain hose is not in water.
Drainage failure.	¬ Drain hose is blocked. ¬ Drain hose end is higher than 100 cm above the floor level. ¬ The filter is blocked.	_ Unblock the drain hose. _ Make sure the drain hose end is lower than 100 cm above floor level. _ Unblock the filter.
Strong vibration while spinning.	¬ Not all transportation bolts have been removed. ¬ Washing machine is located on an uneven surface or is not level. ¬ Machine load is over 8 kg.	_ Remove all transportation bolts. _ Make sure the washing machine is on an even surface and levelled. _ Reduce amount of laundry in the drum.
Operation stops before completing wash cycle.	¬ Water or electricity failure. ¬ Washing machine is in soaking cycle.	_ Check the power supply. _ Wait until the cycle is finished.
Operation stops for a period of time.	¬ Washing machine is in anti-crease soaking cycle. ¬ Washing machine gives an error message.	_ It will resume work after some time. _ Check display codes.
Excessive foam in the drum, which is spilled to the distribution drawer.	¬ The detergent is not a low-foaming type or for manual wash. ¬ Excessive use of detergent.	_ Check if your detergent is appropriate. _ Reduce amount of detergent in the distribution drawer.
Automatic adjustment of the washing time.	¬ The washing program duration will be adjusted according to the laundry load and the initial water temperature.	_ This is normal and doesn't affect the functionality.

Haier

Haier Europe Trading S.r.l.
Via De Cristoforis 12
21100 Varese - Italy

Tel + 39 0332 24511
Fax +39 0332 245146
E-mail het.srl@haiereurope.com